

Clear or Delete Waypoints

Turn on GPS

1. Press Page Key (top right button) until you see the main menu
2. Push joystick selector button to the right until Trip Computer is highlighted
3. Press down on the joystick
4. The Trip Page will be displayed
5. Press the Menu/Find button (bottom left button on GPS) to display small menu
6. Press down on the joystick to select Reset
7. Use joystick to Highlight Select All
8. Push Down on joystick
9. Use joystick to select Apply- Push Down on joystick
10. You will see a display that says "The Data You Have Selected Will Be Permanently Deleted"
11. Use the joystick to select OK